NATURKIND
Kinderwagen

Operating, Cleaning and Maintenance Instructions
Model “Varius pro”

This stroller is suitable for children from six months up to a weight of 15 kg. It is only suitable for children under six months in combination with a matching carrycot or a matching baby basket.
This model is not suitable for jogging, skating or similar activities.

AUSTRIA

“Climate-neutrally printed” on recycled paper made of 100% recovered paper

Dear parents,
We are pleased that you have opted for a Naturkind stroller!
As manufacturers, we have a strong sense of responsibility and are consistently committed to achieving our goal: To develop and produce strollers that your baby truly feels comfortable in and that assure your child a good and healthy start in life.
We thank you for the trust you have placed in us and hope you have a lot of fun with your new Naturkind stroller.
All our efforts are focused on creating a cozy first “living space” for your baby, with loving attention to detail and the finest materials we can find.
This is our aim, and we pursue it with love, great sensitivity and a sense of responsibility.
It is important to us to equip every single Naturkind stroller with our philosophy.

Your Naturkind team

Contents

I Operation **6**

1 Warnings **6**

2 Your Naturkind stroller **8**

3 Setting Up the Frame **10**

4 Activating and Releasing the Parking Brake **11**

5 Adjusting the height of the steering arm **11**

6 Adjusting the Backrest **12**

7 Adjusting the Footrest **12**

8 Using the Seat Belt **13**

9 Mounting the Safety Bar **13**

10 Attaching the Attachment or Baby Basket to the Frame **14**

11 Securing the Soft Carrycot in your Stroller **15**

12 Removing the Fixture or Baby Basket from the Frame **15**

13 Folding the Frame **16**

14 Locking and Releasing the Swivelling Wheels **17**

15 Removing and Mounting the Back Wheels **18**

16 Removing and Mounting Swivelling Wheels **19**

17 Adjusting the Suspension **20**

18 Removing the Roof **20**

19 Adjusting the Fixation of the Roof **21**

II Care **22**

1 Fabric Parts **22**

2 Cork Handles **22**

3 Wheels **22**

III Maintenance **23**

1 General Information **23**

2 Brake Maintenance **23**

3 Suspension and Frame Maintenance **24**

IV Guarantee **26**

1 Regulations **26**

2 Examples **26**

Delivery Contents

Quantity	Description
Varius pro	
1,00	frame
2,00	ten-inch swivelling wheels (PE or pneumatic or comfort wheels)
2,00	twelve-inch back wheels (PE or pneumatic or comfort wheels)
1,00	shopping basket
Option pneumatic wheel	
1,00	valve adapter
1,00	warning pneumatic
Seating unitVarius	
1,00	seating unit
1,00	safety belt (five-point belt with belt centerpiece)
1,00	safety bar
1,00	seat cover
1,00	roof with roof mount
1,00	safety bar cover
2,00	shoulder pad
1,00	instructionsVarius pro
Optional: soft carrycot	
1,00	cover for soft carrycot
2,00	shoulder strap
1,00	coco-latex mattress
1,00	wooden board (lying surface)
2,00	wooden board (side part left and right)
1,00	wooden board (headrest)
1,00	wooden board (footrest)
1,00	instructions soft carrycot
Optional: baby basket	
1,00	baby basket including roof
1,00	mattress cover
1,00	lateral cloth lining
1,00	coco-latex mattress
1,00	wooden board (lying surface)
1,00	instructions baby basket

“Varius pro” sports stroller

“Varius pro” with soft carrycot

“Varius pro” with baby basket

Part I
Operation

1 Warnings

NOTE! Subject to technical modifications.

Please read these instructions carefully before you use your stroller and follow the instructions to assure maximum security for your child, so you can enjoy your stroller for a long time.

Read the following information and warnings carefully before use and keep the instructions for future reference. If you do not observe the information and warnings mentioned here, it could have an effect on your child's safety. Please explain the exact operation to everyone who uses your stroller! **If you fail to observe this, we cannot accept any liability for accidents!**

- This stroller is exclusively intended for children from the age of six months up to a weight of 15 kg.
- This stroller is only suitable for children under six months in combination with a matching carrycot or a matching baby basket.
- The maximum load of the stroller may not exceed 15 kg.

WARNING! Never leave your child unattended!

WARNING! Ensure that all locks are engaged before use.

WARNING! To avoid injuries, ensure that your child is out of reach when you fold and unfold the stroller.

WARNING! Do not let your child play with the stroller.

WARNING! Use a seatbelt as soon as your child is able to sit upright unaided.

WARNING! This seating unit is not suitable for children under six months.

WARNING! Always use the restraint system.

WARNING! It is important to check whether your carrycot or baby basket or child car seat adapter is properly engaged before use.

WARNING! This product is not suitable for jogging or skating.

WARNING! The seating unit or baby basket or carrycot may not be used in cars.

WARNING! Before each use, check whether the stroller or carrycot or baby basket is damaged or parts are broken or torn – if they are, the stroller may not be used under any circumstances!

WARNING! Do not place any additional mattresses in the stroller.

WARNING! Use the crotch strap only in combination with the lap belt.

WARNING! Do not attach any load to the handle. This affects the stability of the stroller.

WARNING! Always actuate the parking brake when you park the stroller and check whether the back wheels are blocked.

WARNING! When you take out or put your baby into the stroller, make sure that the parking brakes are fixed.

WARNING! In order to prevent your child from suffocating, keep small objects away from your child.

WARNING! Attaching an additional seat to the stroller is prohibited.

WARNING! Strollers, sports strollers, carrycots and baby baskets are no replacements for beds and may only be used for the transportation of your child.

WARNING! For safety reasons, only use original accessories and spare parts provided by Naturkind.

WARNING! Keep the stroller away from fire.

WARNING! Never lift your stroller off the ground when your child is in it.

Please also note:

- The maximum load of the shopping basket may not exceed 3 kg.
- The load of the bag located on the rear of the roof part may not exceed 0,2 kg.
- The load of the diaper bag that is attached to the handlebar may not exceed a maximum of 1 kg. Otherwise, the suspension will not function properly.
- If you push your stroller at a speed exceeding 5 km/h, the driving characteristics of your stroller can be affected by fluttering swivelling wheels.
- Always park your stroller out of the reach of children. Do not allow children to play with or in the stroller.
- Keep the rain protection away from children.

2 Your Naturkind stroller

Among other things, your stroller is equipped with the following functions. You can find a detailed description of these and other functions on pages 10 to 21. For video versions of this manual, see http://youtu.be/MJyPDF6DffA.

- The *adjustable steering arm* can easily and, through engaging, be safely adapted to your individual requirements, so both you and your child feel safe when using the stroller. The steering arm (a) can be adjusted with its height adjustment (1). For further information on this, see page 11.

- The *foldable frame* enables you to transport and store your stroller in a space-saving manner.
  You can fold the frame (2) by activating the levers on both sides, with a subsequent release of the catch mechanism (3)that prevents the frame from being folded by accident. For further information on mounting and folding, see pages 10 and 16.

- The *adjustable backrest* enables your child to lie and, moreover, to sit in horizontal position by opting for one of the three adjustable tilts of the backrest.
  You can find the lever for adjusting the backrest (4) on the rear end of the backrest. For further information on this, see page 12.

- The *adjustable roof part* can easily be adapted to changing weather influences.
  This can be achieved by adjusting the handle of the roof part (5).

- The attachment is removable, which makes your stroller more flexible concerning the space necessary for parking.
  To remove it, take it from the support for the attachment after the locking device (6) is released. For further information regarding the insertion and removal of the attachment, see pages 14 and 15.

- *The footrest can easily be adapted* to the different requirements and abilities of your child.
  The footrest (c) is adjusted by using the buttons for the adjustment of the footrest (7). For further information on this, see page 12.

- The *suspension* can be *adjusted* according to the suspension requirements of the terrain and the load of the stroller.

The suspension can be changed with the corresponding adjustment. This is described on page 20.

- The *parking brake* serves the purpose of securing the stroller against rolling away on sufficiently level and rough ground.
  Use the corresponding pedal (9) to activate and release the parking brake. For further information on this, see page 11.

- If you leave the street and choose bumpy forest trails, gravel roads or similar terrain, lockable swivelling wheels can increase driving comfort.
  Use the directional lock (10) to lock and release the swivelling wheels. For further information on this, see page 17.

- This stroller is equipped with a *shopping basket* (e).

3 Setting Up the Frame

1. Place the stroller in a way that enables you to lift the steering arm (a) upward.

Afterwards, perform the steps described in the following according to the design of the stroller's wheels.

Strollers with PE wheels

For video instructions

2 Release the transportation lock (11) and pull the steering arm (a) upward until the stroller sets itself up on its own and both locks audibly engage.

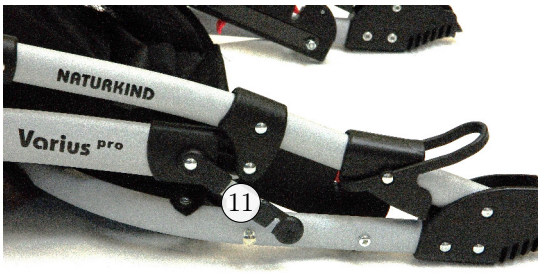

Strollers with pneumatic wheels or comfort wheels

For video instructions

2 Release the transportation lock (11).

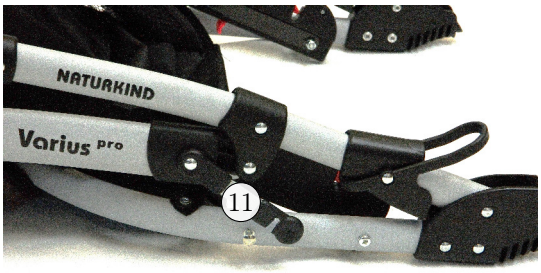

3 Slightly press the swivelling wheels inward, so that the tires no longer touch the transverse axis. Then, pull the steering arm (a) upward until the stroller sets itself up on its own and both locks audibly engage.

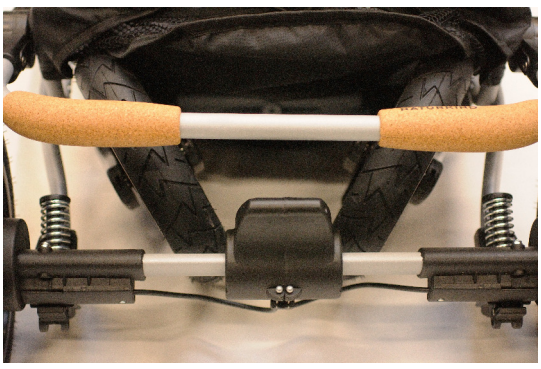

WARNING! Before you use your stroller, check whether all locks are engaged.

WARNING! When you are setting up your stroller, beware of resulting clamping points. They can cause injuries in a moment of distraction.

4 Activating and Releasing the Parking Brake

The parking brake is activated by stepping on the foot lever (9). Afterwards, push the stroller a few centimeters forward to ensure that the brake is engaged. Check whether the brake is engaged – the back wheels of the stroller must be blocked. The parking brake is released by pulling the foot lever (9) upward.

WARNING! Before you put your child into the stroller or take your child out of it, always make sure that the parking brake is activated.

WARNING! Always check whether the back wheels of the stroller are blocked after you activate the parking brake. Only let go of the stroller if you are certain that the parking brake works.

WARNING! The brake cables must not be bent – this can lead to brake failure.

5 Adjusting the height of the steering arm

Push the buttons on both sides of the steering arm for the height adjustment of the steering arm (1) and move it to the desired position.

WARNING! When you adjust the height of the steering arm, please beware of resulting clamping points. They can cause injuries in a moment of distraction.

6 Adjusting the Backrest

For video instructions

Open the push button on the lateral roof part. Pull the lever for adjusting the backrest (4) and select the desired position. Make sure that the backrest engages and check whether it maintains the set position.

WARNING! The sitting position is not suitable for children under the age of 6 months.

WARNING! When you are adjusting the backrest, please beware of resulting clamping points. They can cause injuries in a moment of distraction.

7 Adjusting the Footrest

Push the buttons for adjusting the footrest (7)on both sides, keep pushing them and make sure that the footrest is locked in the desired position. Make sure that the footrest maintains the set position.

WARNING! Whenever you use the soft carrycot, the footrest must always be in a level position, as a support.

WARNING! Neither the footrest (c) nor the safety bar (d) may be used to lift or carry the stroller.

8 Using the Seat Belt

1. Activate the parking brake (cf. section 4 on page 11) before you place your child in the attachment.

2. Use the sliding buckles (15) to shorten or lengthen the belt, if required.

3. Push the tongues to open the belt and put your child in the stroller. Make sure that the crotch strap (16) is looped around the lower eyelet on the centerpiece of the belt (18) and that it is secured with the push button that is attached to the centerpiece of the belt.

4. Secure your child with the belt. Place both tongues of the locking piece of the lap belt (12) in the centerpiece of the belt (18). Hang the carabines of the shoulder straps (17) in the eyelets on the locking piece of the lap belt. Adjust the belt with the sliding buckles (15) and pull it tight.

5. Loop the crotch strap around the centerpiece of the belt (18) and fasten it with the push button attached to it. Make sure that this pillow and the pillows on the shoulder straps are properly positioned to prevent your child from having any pressure marks.

WARNING! Use the safety belt as soon as your child can sit upright unaided.

WARNING! Always use the crotch strap (16) in combination with the lap belt (12).

9 Mounting the Safety Bar

1. Put the safety bar (d) on the frame of the backrest.

2. Close the holder on both sides of the safety bar.

3. Place the bib over the safety bar and fasten it with the push button.

WARNING! Be careful not to get your child or yourself caught when you mount the safety bar.

10 Attaching the Attachment or Baby Basket to the Frame

For video instructions

1. Activate the parking brake by stepping on the foot lever (9) (cf. section 4 on page 11).
2. Place the metal pins that are attached to both sides of the attachment or the baby basket in the slots provided (14).

For video instructions

3. Push the attachment or the baby basket on the height of the locking devices (6) downward until they audibly lock on both sides of the stroller. Make sure that the locking device – as depicted in the following figure – is locked above the metal pins of the attachment or the baby basket on both sides of the stroller.

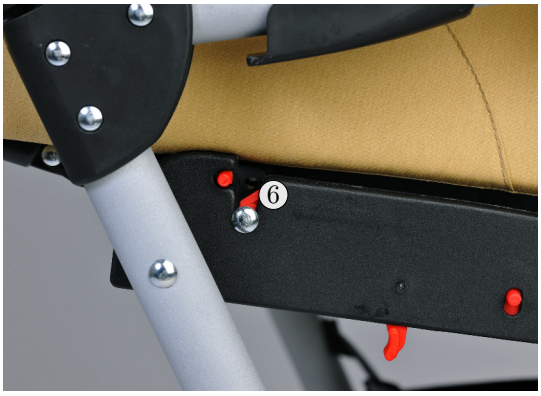

WARNING! Before use, make sure that the attachment or the baby basket is properly engaged!

WARNING! When you fixate the attachment or the baby basket to the frame, children are prohibited from sitting inside the frame.

WARNING! Make sure that you only lift the attachment laterally at the metal pins. The roof of the attachment is not suitable for lifting.

11 Securing the Soft Carrycot in your Stroller

For video instructions

1. Activate the parking brake by stepping on the foot lever (9) (cf. section 4 on page 11).
2. Place the footpart (c) and the back part (b) in a horizontal position (cf. section 6 on page 12 and section 7 on page 12).
3. Let the lap belt (12) including the centerpiece of the belt (18) hang down the sides of the attachment. Spread the shoulder strap (17) and the crotch strap (16) flat in the attachment. Place the soft carrycot in the attachment, with the head area at the roof part.
4. Fixate the soft carrycot with the lap belt (12). Pull the lap belt tight.

5. Loop the strap in the foot area of the carrycot around the large tube of the footrest and fixate it with the push button on the strap.

WARNING! Never pull the belt too tight, or your child may be constrained or exposed to force.

12 Removing the Fixture or Baby Basket from the Frame

For video instructions

1. Activate the parking brake by stepping on the foot lever (9) (cf. section 4 on page 11).
2. Push the red pin downwards, as illustrated, keep it pushed and pull the lever, as illustrated, in the direction of the pin until the lock audibly opens. Repeat this procedure on the other side of the stroller.

For video instructions

3. Pull the attachment or the baby basket in the direction of the steering arm until the locking device (6) releases the metal pin on both sides of the stroller.

4. Remove the attachment or the baby basket.

WARNING! Do not remove the attachment or the baby basket from the frame if a child is sitting inside it.

WARNING! Make sure that you only lift the attachment laterally at the metal pins. The roof of the attachment is not suitable for lifting.

13 Folding the Frame

For video instructions

1. Remove the attachment or the baby basket from the frame (cf. section 12 on page 15) and empty the shopping basket (e).

2. Pull the folding levers (2) towards the steering arm (a)on both sides of the stroller. Keep the folding levers in this position and push the steering arm downwards. Afterwards, release the folding lever.

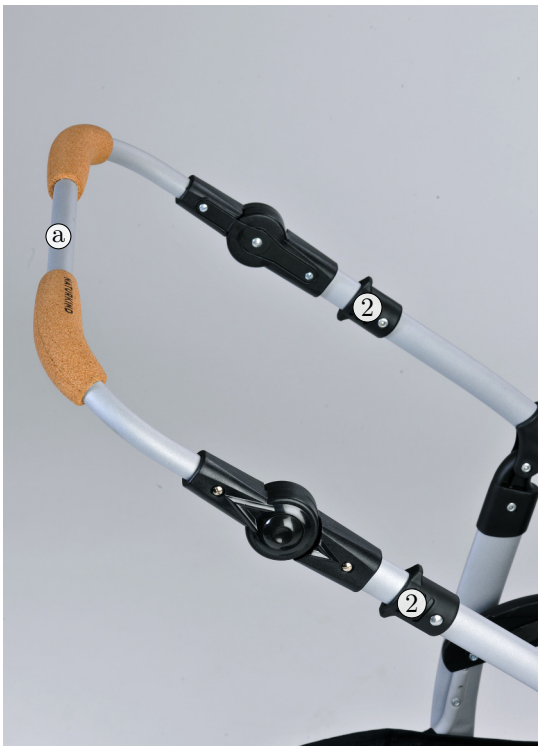

3. Pull the catch mechanism (3) upwards. Push the steering arm (a) downward until the frame folds.

4. Secure the frame with the transportation lock (11).

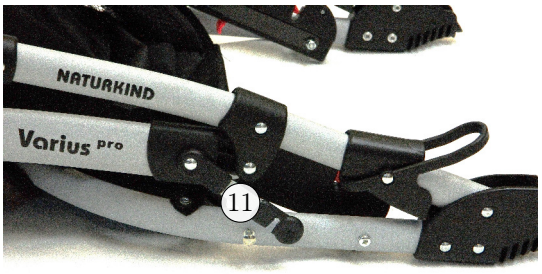

WARNING! When folding the frame, please beware of resulting clamping points. They can cause injuries in a moment of distraction.

14 Locking and Releasing the Swivelling Wheels

To lock the swivelling wheels, push the lock downwards and turn the swivelling wheel that is to be arrested until it engages.
To release the swivelling wheels, push the lock upwards.

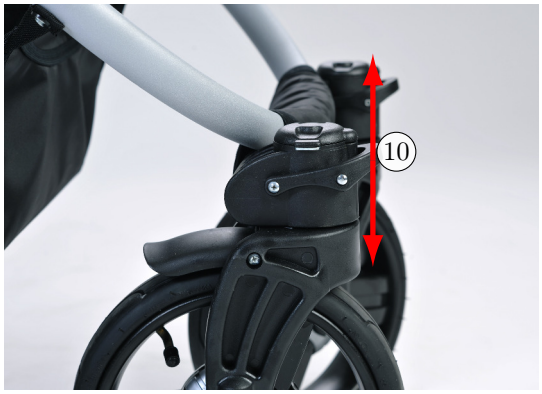

15 Removing and Mounting the Back Wheels

Depending on the design you have chosen, the back wheels of your stroller are removed and mounted as described in the following.

WARNING! Verify the secure hold of the wheels after you mount them.

WARNING! To ensure that the wheels run normally, they need to exhibit an axle clearance.

15.1 PE wheels

For video instructions

To remove PE wheels, please proceed as follows:

1. Push the black push button at the center of the wheel.
2. Afterwards, remove the wheel from the axle.

To mount PE wheels, please proceed as follows:

1. Place the wheel onto the axle until you reach the mechanical stop.
2. Push the black push button at the center of the wheel and push the wheel one more centimeter onto the axle.
3. Release the black push button and slowly pull the wheel from the axle (outward) until it audibly engages.

15.2 Pneumatic Wheels

To remove pneumatic wheels, please proceed as follows:

For video instructions

1. Press the lateral indentation at the center of the wheel.
2. Then, remove the wheel from the axle.

To mount pneumatic wheels, please proceed as follows:

1. Place the wheel onto the axle until you reach the mechanical stop.
2. Press the lateral indentation at the center of the wheel and push the wheel one centimeter further onto the axle.
3. Release the lateral indentation and slowly pull the wheel from the axle (outward) until it audibly engages.

15.3 Comfort Wheels

To remove comfort wheels, please proceed as follows:

For video instructions

1. Push the button at the center of the wheel.
2. Then, remove the wheel from the axle.

To mount comfort wheels, please proceed as follows:

1. Place the wheel onto the axle until you reach the mechanical stop.
2. Push the button and push the wheel one centimeter further onto the axle.
3. Release the button and slowly pull the wheel from the axle (outward) until it audibly engages.

16 Removing and Mounting Swivelling Wheels

To remove a swivelling wheel, firmly push the top of the metal pin, at its attachment slot.

To mount swivelling wheels, place the wheel in the attachment slot until it audibly engages.

WARNING! Verify the secure hold of the wheels after you mount them.

17 Adjusting the Suspension

If the suspension is not fully functional – due to the terrain being travelled on or a load of the stroller of 10 kg or more – so that the stroller is no longer continuously sprung when being used, the preload of the suspension needs to be adjusted. Please proceed as follows:

For video instructions

1. Turn the empty frame until the wheels are on top.
2. Adjust the suspension with the two levers (8) that are located close to the back wheels by shifting them until they reach the mechanical stop.

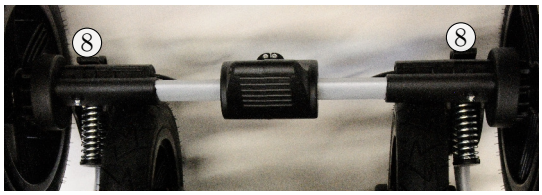

WARNING! After every adjustment of the suspension, make sure that the suspension is equally adjusted on both sides.

18 Removing the Roof

To remove the roof, please proceed as follows:

1. Open the push button on both sides of the fabric part of the roof that is located at the star-shaped rotary knobs (19).

2. Push the plug-in part of the roof (20)in the round recess on both sides. Then, pull the plug-in part from the holder and remove the roof.

WARNING! Do not place any load on the roof.

WARNING! Never transport the sports car attachment on the roof.

19 Adjusting the Fixation of the Roof

In order to adjust the fixation of the roof, tighten the screw at the fixation of the star-shaped rotary knob with a screwdriver.
Turn the star-shaped rotary knobs (19) in clockwise direction on both sides while holding the screw tight to increase the fixation of the roof (roof adjustment becomes harder). Turn the star-shaped rotary knobs (19) counterclockwise on both sides to release the fixation (roof fixation becomes easier). Make sure that the fixation is equally adjusted on both sides of the roof.

WARNING! Check the fixation once a week.

WARNING! Do not tighten the screw too firmly – this damages the roof plug-in.

Part II
Care

1 Fabric Parts

All cotton fabrics come from controlled organic cultivation and are dyed on a natural basis. This natural fiber is more sensitive than synthetic fiber and is therefore quicker to bleach. Please be sure to observe the following care instructions for the fabrics. Otherwise, the virgin sheep's wool that is used as filling material may become felted, exit the material or become unevenly distributed.

- Clean small stains carefully with a damp towel and clear water. Please avoid rubbing or scratching.
- All removable pieces of fabric (seat cover, roof part, safety bar cover and shoulder padding) can be washed with liquid heavy-duty detergents in the washing machine at a maximum water temperature of 30 °C with a wool program. Do not use detergents with optical brighteners – they can change or destroy the color particles. When you use the washing machine, spin-dry at a maximum of 600 revolutions per minute and avoid wringing out the fabric parts after washing.[1]
- Only let the fabric parts air-dry and, as far as possible, let them dry in the shade. Never use a dryer.
- Shake the dried fabric parts to fluff up the virgin sheep's wool.

The dyed fabrics exhibit the following light fastness and abrasion resistance:

fabrics	light fastness	abrasion resistance	
		dry	wet
light organic cotton colors	3 to 4	3	2
dark organic cotton colors	3 to 4	2	2

Please note that higher ozone levels have a negative effect on the color fastness of the fabrics. Because fabrics also react sensitively to solar radiation, we recommend to keep the stroller away from the blazing sun.

2 Cork Handles

Clean dirty cork handles by wiping them with lukewarm soapy water and a soft cloth. Do not use any abrasive cleaning agents or cleaning rags.

3 Wheels

The wheels are not balanced. Therefore, a production-related imbalance cannot be excluded and does not constitute a defect.
Wheel sockets and fixed plates are wear parts and must be renewed, if necessary, as otherwise the stroller's safety can no longer be ensured.
Clean and maintain the rims regularly.

- Heat and pressure marks can permanently deform the wheels.
- Check the relative tire pressure before each use. It should be between 1.0 and 1.4 bar and must not exceed 1.5 bar!
- Broken tubes can be fixed or replaced by new tubes that are available in every bicycle shop.

WARNING! The tires can leave tire marks or discolorations on certain flat surfaces (particularly vinyl plastic laminate, parquett flooring and linoleum flooring).

[1] In der Vorlage auf Deutsch haben wir mittlerweile "Schleudern aus" stehen. Wie wäre dies professionell zu übersetzen?

Part III
Maintenance

1 General Information

Please perform the following maintenance work at least once a month:

- Clean and grease the axle.
- Check the wheel sockets and the fixed plates. Exchange them, if necessary.
- Tighten the self-locking screws. Exchange them (for instance – but not exclusively – if the top no longer maintains the adjusted position), if necessary.
- Check all screw connections. Tighten the screws, if necessary.
- Oil all movable parts (springs, hinges).
- Oil all brake parts (brake cable, brake spring, brake bolt).
- Rid small paint damages of dirt and rust with fine sandpaper. Afterwards, carefully apply a new coating layer to the affected areas with a paint stick from a specialist shop, according to the instructions.

WARNING! Please note that the stroller needs to be cleaned after every use under certain environmental conditions (proximity to the ocean, grit, contact with sand, etc.).

WARNING! Whenever your stroller comes in contact with cleaning agents, please note that the corresponding parts of the stroller need to be oiled.

WARNING! Avoid bumping axles or wheels into things – this prevents the deformation of the frame! A frame that has been deformed by mechanical force cannot be used any more and does not consitute a warranty claim.

2 Brake Maintenance

1. Remove the back wheels and grease their axles.

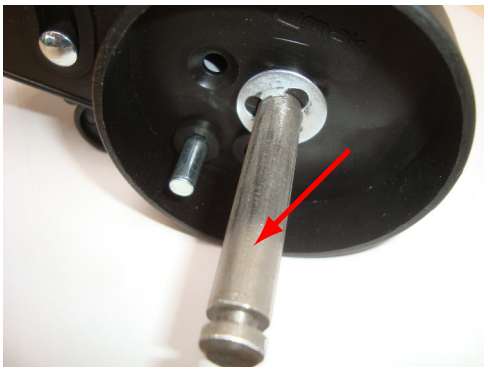

2. Actuate the brake and oil the brake pin at both rear suspensions.

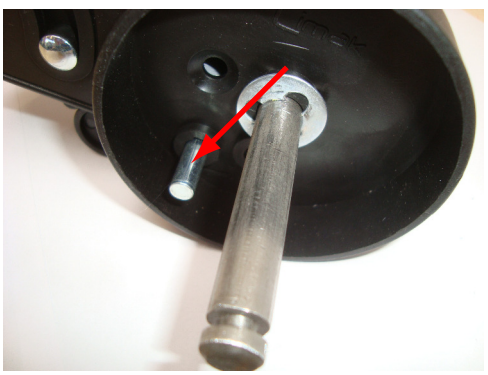

3. Oil the brake springs and the pivot bolt by spraying oil in the opening for the brake line at both rear suspensions.

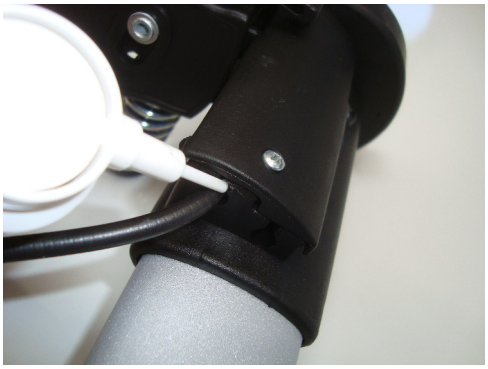

4. Spray oil in both brake lines at the brake pedal. Make sure that the brake cables are not bent and that they function properly.

5. Spray oil into the opening of the brake pedal, from left and right and from below and above.
   Actuate the brake and repeat the procedure.

3 Suspension and Frame Maintenance

1. Spray oil in the spring suspension at both back wheels, both inside and outside.

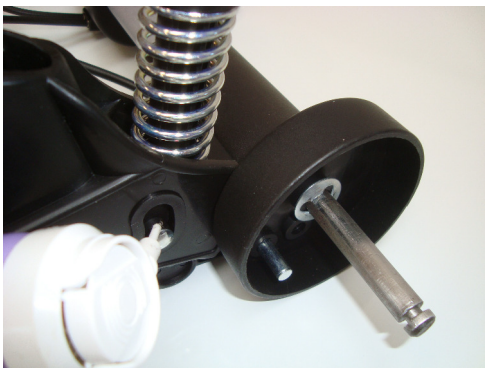

2. Turn the stroller around and press the pedal of the parking brake from below to tighten the suspension. Now, oil the spring suspension with the tightened spring.

3. Once again, press the pedal of the parking brake from below and oil the innerspring construction: inner wall left and right (between the plastic parts) and the middle guide.

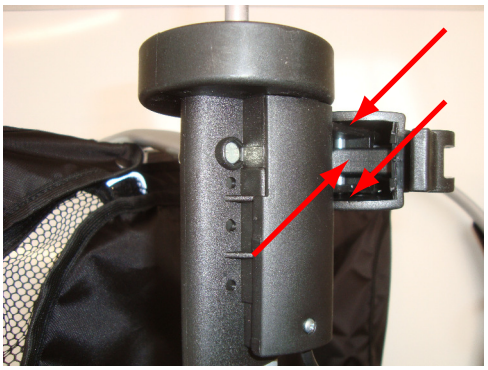

4. Now, put some oil in the frame holder, inside and outside.

5. Put some drops of oil between the plastic connections of the frame.

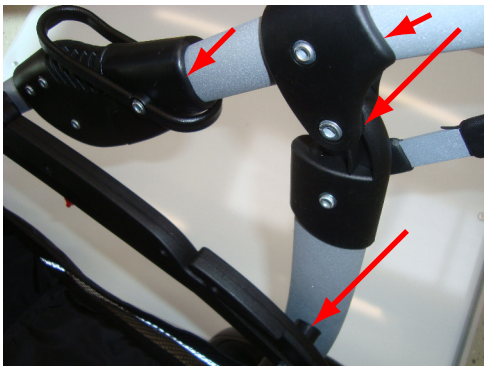

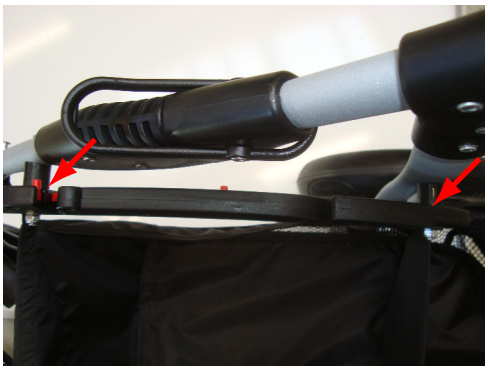

6. Finally, put some drops of oil on and behind the pins of the locking mechanism.

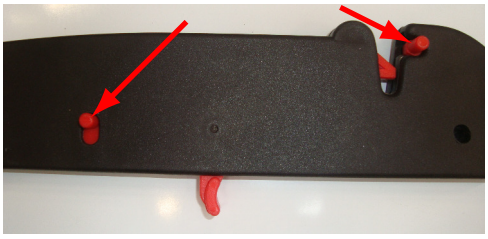

Part IV
Guarantee

1 Regulations

You have a guarantee claim within a period of two years for this stroller. The period starts with the delivery of the product by the distributor. Please keep your receipt as proof; a complaint cannot be processed without an invoice. The guarantee concerns all defects in material and workmanship that are present at the time the product is delivered.
The guarantee does not cover the following points:

- wear marks.
- consequences of improper use.
- consequences of excessive use or load.
- consequences of incorrect assembly or repair.
- consequences of careless handling or a lack of care and maintenance.
- consequential damages that result from smaller, disregarded damages or defects.
- consequences of improper or independent repairs or changes of the product without prior approval of Naturkind.

2 Examples

None of the following examples are guarantee claims.

- Color differences cannot always be avoided during production and do not constitute a reason for complaint.
- The fading or lighter edges of textiles do not constitute a material defect, they are a result of normal wear and tear.
- Mechanical effects, such as friction or rubbing or improper use, that create holes or rubbing spots in the material.
- If the stroller textiles are washed correctly, the material, and the sheep's wool, do not change! Please be sure to observe the washing instructions in the care instructions carefully. If the fabric cover exhibits the following defects after washing, this is clearly due to improper washing and does not fall under the guarantee:
  - shrinking of fabric cover
  - wool is felted
  - wool has penetrated the material
  - the wool is no longer evenly distributed in the cover

- Wool and material are matched with one another, so that the wool hardly penetrates the material under normal use. However, it is natural for wool fibers to penetrate the material under normal use, due to mechanical wear. You can simply remove these fibers with a clothes brush.
- Tearing of the seams or push buttons: When purchasing your stroller, please check whether all fabrics have been properly sewn and whether the push buttons are securely fixed. In the event of a claim, we kindly ask you to submit you claim immediately within a period of two (2) weeks. Claims that are made later than one (1) month after your child's birthday cannot be accepted and are regarded as a result of wear.

- The frame and the tubes are protected against rust by high-quality paint. If scratches that result from the usage of the stroller are not treated according to the instructions, this can lead to rust spots. Due to the effects of salt (grit in the winter, ocean water, etc.), scratched spots on the tubes as well as rivets and screws can get rusty. Here, it is especially important to pay special attention to the care and maintenance of the frame.
- With plastic parts, there is a certain risk of breakage when loaded at very low temperatures, which is why the stroller must be stored in frost-proof rooms. Broken plastic parts are covered by the guarantee if they turn out to be material defects after being tested accordingly.
- The handles consist of the pure natural material cork and, under normal use, have a service life of over a year. The guarantee does not cover damages of the cork handles due to friction, an exposure to rubbing or other improper use.
- The suspension system is subject to wear; a slackening of the springs due to long and intensive use is entirely normal.
- Worn tires are a natural sign of wear and tear.
- Flat tubes can only be attributed to external influence, sharp objects or pushing the stroller with insufficient air pressure. Therefore, check the relative tire pressure and protect the pneumatic tires from overheating that can be caused by a long exposure in the sun or leaving the stroller in a hot trunk for too long.
- Wheel sockets can also be worn down by excessive use and wrong or inadequate maintenance.
- Avoid bumping the axles or wheels into objects – this prevents the deformation of your frame! A frame that has been deformed by mechanical force can no longer be used and does not constitute a guarantee claim.

Naturally, with love.

This Naturkind stroller is made of pure natural materials:

cotton from controlled organic cultivation (kbA) for the fabric parts

pure organic virgin sheep's wool from controlled organic livestock (kbT) for the filling

✓cork

✓coconut

✓wood

Every Naturkind stroller is manufactured for you by hand!

Our models comply with the Euro standards

- EN 1888-2012
- EN 1466

Naturkind GmbH
Langwiesen 19, A-4209 Engerwitzdorf
Tel.: +43 7235 62243, Fax: +43 7235 622433, kinderwagen@naturkind.at, www.naturkind.at